
SCAG POWER EQUIPMENT

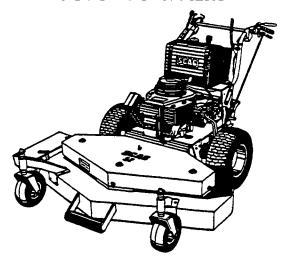

KEY IDENTIFYING FEATURES ALL UNITS LISTED

PUMP AND MOTOR DRIVE SYSTEM
HYDROSTATIC OIL RESERVOIR
EYEBOLT TURNBUCKLE ENGAGEMENT SYSTEM
SPEED ADJUSTMENT LEVER

MODEL#


SWZ36-14KA SWZ36-14KH SWZ48-14KA SWZ48-14KH

SWZ-14KA SWZ-14KH SWZ-18KH SWZ-20KHE

> SWM-52 SWM-61 SWM-72

> > **SWF**

36" CUTTER DECK

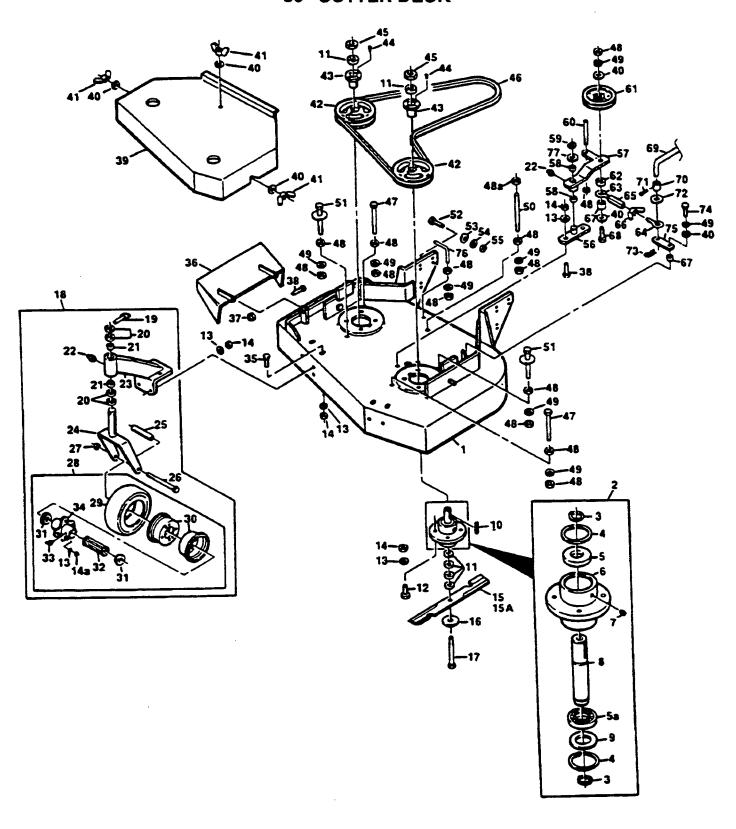


36" CUTTER DECK

| Ref. | . Part | | Ref | . Part | |
|-------------|----------|---|-----|----------|--|
| No. | Number | Description | No. | Number | Description |
| 1 | 46087 | Cutter Deck (Includes Decals) | 39 | 46085 | Belt Cover Assembly (Includes Decal) |
| 2 | 46020 | Cutter Spindle Assy. (Includes Items 3-9) | 40 | • | Washer, 25/64 x 15/16 x 12 ga |
| 3 | 04050-04 | Retaining Ring, 1° ExtInverted | 40a | • | Washer, 13/32 x 13/16 x 16 ga. |
| 4 | 04050-07 | Retaining Ring, 2-7/16 Intbsc | 41 | 04022-04 | Wing Nut, 3/8-16 Elastic Stop |
| 5 | 48101-02 | Bearing, Spindle | 42 | 48127 | Pulley (Includes Items 43-44) |
| 6 7 | 41001 | Spindle Housing | 43 | 48141 | Tapered Hub |
| ********* | 48114-02 | Grease Fitting, Str., 5/15 Serr | 44 | • | Hex Hd. Bolt, 1/4-20 x 3/4 |
| 8 | 43001-02 | Spindle, Cutter Blade | 45 | 4 | Hex Nut, 5/8-11 |
| 9 | D4041-02 | Washer, 1-5/16 x 2-7/16 x 16 ga. | 46 | 48204 | Belt, Blade Drive |
| 10 | D4063-08 | Key, 1/4 x 1/4 x 2 | 47 | | Hex Hd. Bolt, 3/8-16 x 5 |
| 11 | 43038 | Spacer, Cutter Blade | 48 | • | Hex Nut, 3/8-16 |
| 12 | • | Hex Hd. Bolt, 5/16-18 x 1-1/4 | 48a | • | Hex Nut, 3/8-16 Ctr Locknut |
| 13 | • | Lockwasher, Spring, 5/16 | 49 | • | Lockwasher, Spring 3/8 |
| 14 | • | Hex Nut, 5/16-18 | 50 | 04004-02 | Support, Belt Cover |
| 14a | • | Hex Nut, 5/16-24 | 51 | 45098 | Belt Guide |
| | 48108 | Cutter Stade 18" | 52 | • | Hex Hd. Bolt, 7/16-14 x 1-1/4 |
| 15a | 48185 | Cutter Biade 18" Hi Lift | 53 | • | Washer, 15/32 x 59/64 x 16 ga. |
| 16 | 04040-10 | Flat Washer, 5/8 W | 54 | • | Lockwasher, Spring, 7/16 |
| 17 | 04001-41 | Hex Hd. Bolt, 5/8-11 x 9-1/2 | 55 | • | Hex Nut. 7/16-14 Elestic Stop |
| 18 | 46079 | Cester Assembly (Includes Items 19-28) | 56 | 45037 | ider Pivat |
| 19 | 04066-01 | Quick Pin | 57 | 46145 | Idler Arm Assy. (Includes Items 22 & 58) |
| 20 | 43037-01 | Spacer, Caster Yoke, 1/2" long | 58 | 48100-05 | Bronze Bearing |
| | 48100-01 | Bronze Bearing | 59 | 04050-02 | Retaining Ring, 3/4 Ext"E" |
| 22 | 48114-01 | Grease Fitting, Str. 1/4-28 | 60 | 04004-04 | Stud |
| 23 | 46082 | Support Assembly. | 61 | 48269 | Idler Pulley, Belt Clutch |
| 24 💮 | 45006 | Caster Yoke | 62 | 43063 | Specer, tidler |
| | 43022 | Sleeve, Caster Wheel Brg. | 63 | 04070-02 | Evelott LH |
| 26 | D4001-37 | Hex Hd. Bot, 1/2-13 x 5-1/2 | 64 | 04070-01 | Eyebolt RH |
| 27 | | Hex Lockrut, 1/2-13 | 65 | 43025 | Turnbucide |
| 28 | 48307-01 | Wheel Assy. (includes 13-14s, 29-34) | 68 | 04022-02 | Wing 1kg, 5/16-18 |
| 29 | 48307-02 | Tire Only Caster Wheel | 67 | 43042 | Sleeve, Clutch Rod |
| | 48006-03 | Inner Tube only | 68 | • | Hex Hd. Bolt, 3/8-16 x 2-3/4 |
| 30 | 48307-04 | Rim Pair, Caster Wheel | 69 | 44064 | Blade Clutch Rod, Lower |
| 31 | 48006-07 | Retainer, Bearing, Caster Wheel | 70 | 43043 | Sieeve, Clutch Rod |
| 32 | 48006-06 | Roller Bearing, Caster Wheel | 71 | • | Cotter Pin. 3/32 x 1 |
| 33 | 48114-03 | Greese Fitting, 45' 1/4-28 | 72 | • | Washer 3364 x t x 16 ge. |
| 34 | 48006-05 | Hub Assembly | 73 | 04062-01 | Hair Pin, Large |
| 35 | • | Hex Hd Bolt, 5/16-18 x 3/4 | 74 | | Hex Hd. Bolt. 2/8-16 x 1 |
| 3 5 | 4510G | Discharge Cityte | 75 | 42057 | Cam Link |
| 37 | • | Hex Nut. 5/16-18 Elastic Stop | 76 | 44009 | Belt Gude |
| 28 | • | Hex Hd Balt, 5/16-18 x 1 | 77 | 04041-08 | Washer, 3/4 x 1-1/4 x 035 |

^{*} Common hardware which should be purchased locally. All bolts are Grade 5 plated, all other fasteners are zinc plated.


48", 52", 61", & 72" CUTTER DECKS

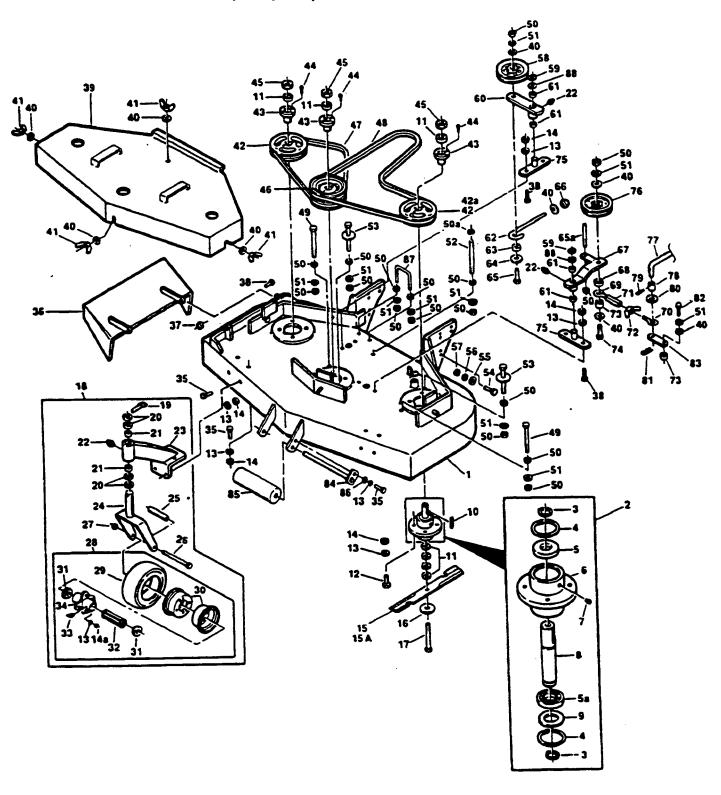

48", 52", 61", & 72" CUTTER DECKS

| Ref. No. | . Part No. | Description | 48 52 61 72 | Ref. Part No. No. | Description | 48 52 61 7 |
|-------------|-------------------|---|-------------|----------------------|--|--|
| 1 | 46088 | Cutter Deck (includes decais) | x | 42a 48299 | Pulley (Includes 43-44) | ······································ |
| 1 | 46163 | Cutter Deck (Includes decals) | × | 43 48141 | Tapered Hub | x x x x |
| 1 | 46119 | Cutter Deck (Includes decals) | x | 44 | Hex Hd. Bolt, 1/4-20 x 3/4 | x x x x |
| 1 | 46194 | Cutter Deck (includes decals) | x | 45 | Hex Nut, 5/8-11 | x x x x |
| 2 | 46020 | Cutter Spindle Assy. (Includes 3-9) | | 46 48412 | Pulley, Double (Includes 43-44) | x |
| | 04050-04 | Retaining Ring, 1" Ext-Inverted | x | 46 48302 | Pulley, Double (Includes 43-44) | |
| | D4050-07 | Retaining Ring, 2-7/16" int.basic | x | 47 48087 | Beit, RH Blade Orive | x |
| | 48101-02 | Bearing, Cutter Spindle | x | 47 48285 | Belt, RH Blade Drive | × |
| | 41001 | Spindle Housing | x | 47 48265 | Belt, RH Blade Drive | × |
| | 48114-02 | Greese Fitting Str. 5/16 Serr. | 2 | 47 48295 | Belt, RH Blade Drive | , |
| 3 | 43001-02 | Spindle, Cutter Blade | x | 48 48089 | Belt, Blade Drive | X |
| | 04041-02 | Washer, 1-5/16 x 2-7/16 x 16 ga. | x | 48 48286 48 48264 | Belt, Blade Drive | X |
| 0 | 04063-08 43038 | Key, 1/4 x 1/4 x 2 | •• •• •• | 48 48296 | Belt, Blade Drive | × . |
| 2 | 43030 | Spacer, Cutter Blade Hex Hd. Bolt, 5/16-18 x 1-1/4 | x | 49 | Belt, Blade Drive Hex Hd. Bolt, 3/8-16 x 5" | , , , , |
| 2 3::: | *** | Lockwasher, Spring, 5/15 | * * * * | 50 | Hex Nut. 3/8-16 | x x x x |
| | | Hex Nut. 5/16-18 | * * * * | 50a * | Hex Nut. 3/8-16, Centerlock | x x x ; |
| M | • | Hex Nut. 5/16-24 | * * * * * | 51 - | Lockwasher, Spring, 3/8 | * * * * |
| | 48110 | Cutter Blade 16-1/2" | * · · · | 52 04004-02 | | X |
| \$ | 48108 | Cutter Blade 18" | . X | 53 45098 | Belt Guide | * * * * : |
| 5 | 4B111 | Cutter Blade 21* | X | 54 | Hex Hd. Bolt. 7/16-14 x 1-1/2 | X X X |
| 5 | 48112 | Cutter Blade 24" | _ x | 55 | Washer, 15/32 x 59/64 x 16 ga. | xxx |
| | 48184 | Cutter Blade 16-1/2" Hi Lift | x | 56 | Lock Washer, Spring, 7/16 | xxx |
| | 48185 | Cutter Blade 18° Hi Lift | x | 57 • | Hex Nut. 7/16-14 | x x x ; |
| 5 | 04040-10 | Flat Washer, 5/8" W | x | 58 48181 | Idler Pulley, "V" Groove | XXX |
| | D4001-41 | Hex Hd. Bolt. 5/8-11 x 9-1/2" | XXXX | 59 04050-02 | | * * * |
| 8 | 45079 | Caster Assy, Comp. (incl. 19-28) | x | 50 45081 | Idler Arm Assy. (Includes 22 & 61) | |
| 9 | 04066-01 | Quick Pin | * * * * | 61 48100-05 | | x x x : |
| 0 | 43037-01 | Spacer, Caster Yoke, 1/2" thick | * * * * | 62 43028 | J Rod, killer Pull | x x x : |
| | 48100-01 | Branze Bearing | x | 63 43077 | Specer, J Putt Rod | x |
| ~~ 2 | 48114-01 | Grease Fitting, Str., 1/4-28 | x | 64 04041-12 | | x |
| 23 | 46082 | Support Assy. (incl. 21-22) | x x x x | 65 | Hex Hd. Bolt, 3/8-16 x 2-1/4 | x x x : |
| 4 | 45006 | Caster Yoke | x | 65a 04004-04 | Stud | x |
| 5 | 43022 | Sleeve, Caster Wheel Bearing | x | 66 | Hex Nut, 3/8-16 Elastic Stop | x x x : |
| 6 | 04001-37 | Hex Hd Bolt, 1/2-13 x 5-1/2" | x | 67 46145 | idler Arm (includes 22 & 61) | x x x : |
| 7 | • | Hex Locknet, 1/2-13 | * * * * | 68 43063 | Spacer | x x x |
| 8 | 48307-01 | Wheel Assy. (incl. 13-14, 29-34) | * * * * | 69 04070-02 | Eyebolt, LH | * * * |
| 9 | 48307-02 | T | | 70 04070-01 | Eyebolt, RH | x |
| | 48005-03 | Inner Tube only, Caster Wheel | * * * * | 71 43025 | Tumbucke | * * * |
| 0 | 48307-04 | Rim Pair, Caster Wheel | * * * * | 72 04022-02 | Wing Nut, 5/16-18 | * * * |
| 7 | 48006-07 | Retainer, Bearing, Caster Wheel | XXXX | 73 43042 | Sleeve, Cam Clutch | XXX |
| 2 | 48006-06 | Roller Bearing, Caster Wheel | x | 74 * | Hex Hd Bolt, 3/8-16 x 2-3/4 | x |
| 3 | 48114-03 | Grease Fitting 45' 1/4-28 | x | 75 45037 | Idler Pivot | xxx |
| 4 | 48006-05 | Hub Assy. (incl. bolts) | x | 76 48269 | Idler Pulley, Belt Clutch | xxx |
| 5 | • | Hex Hd. Bolt, 5/16-18 x 3/4* | x | 77 44064 | Blade Clutch Rod, Lower | x |
| 5 | 45023 | Discharge Chate | * * * | 78 43043 | Sleeve, Clutch Rod | x |
| 6 | 45100 | Discharge Chare | x | 79 | Cotter Pin, 3/32 x 1 | XXX |
| 7 | • | Hax Nut, 5/16-18 Elasiic Stop | * * * * | 80 * | Washer, 33/64 x 1 x 15 ga. | x |
| 18 | • | Hex Hd. Bolt, 5/16-18 x 1 | * * * * | 81 04062-01 | | XXX |
| 9 | 45086 | Belt Cover (Includes decais) | 3 | 82 | Hex Hd Bolt, 3/8-15 x 1 | XXX |
| 9 | 46164 | Belt Cover (includes decals) | X | 83 42057 | Cam Link | x x x |
| 19 | 46121 | Belt Cover (includes decals) | x | 84 45046 | Roller Shaft | x x x |
| 19 | 46312 | Belt Cover (includes decals) | x | 85 48038 | Guide Roller | x x x |
| Ю | • | Washer 25/64 x 15/16 x 12 ga. | x x x x | 86 | Flat Washer, 11/32 x 11/16 x 16 ga | |
| H | 04022-04 | Wing Nut, 3/8-16 | x x x x | 87 44008 | Belt Guide | x x x |
| 12 | 48127 | Pulley (Includes 43-44) | x | 88 | Flat Washer, 3/4 x 1-1/4 x .035 | $\mathbf{x} \mathbf{x} \mathbf{x}$ |

^{*} Common hardware which should be purchased locally. All bolt Grade 5 plated, all other fasteners zinc plated.

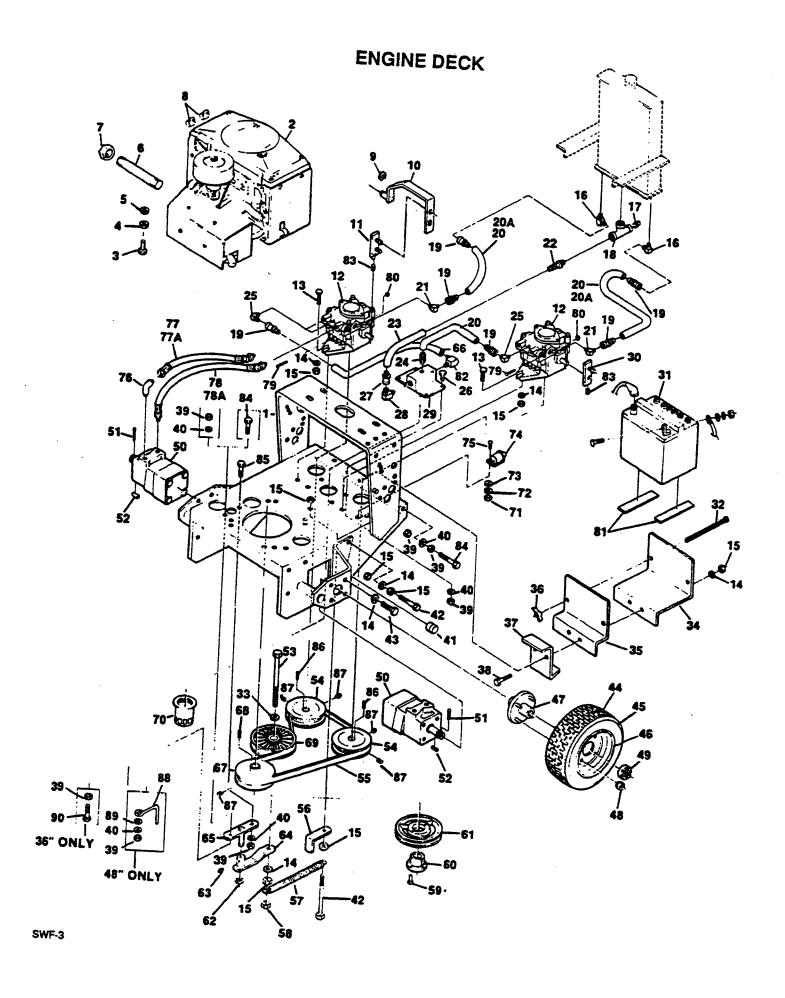

ENGINE DECK

| ner. | PART | | | | | |
|----------------|------------|---|-----------------|-------------|------------|--------------|
| NO. | NO. | DESCRIPTION | 14KA | 14KH | 18KH | 20KHE |
| 1 | 45270 | Engine Deck | x | × | x | × |
| 2a | 48528 | Engine 14H Kawasaki | × | • | • | • |
| 2a | 48357 | Engine 14HP Kohler | ^ | × | | |
| 2b | 48268 | Engine 18HP Kohler (MV18 PS-58511) | | ^ | J | |
| | | | | | X | |
| 2b | 48358 * | Engine 20HP Kohler El. St. (MV20 PS-57508) | | | | x |
| 3 | * | Bolt, Hex Hd. Metric 8 x 30 | · X | , x | | |
| 3 | | Hex Hd. Bolt, 5/16-18 x 1-1/2 | | | × | × |
| 4 | * | Hex Nut, 5/16-18 Elastic Stop | | | × | x |
| 5 | * | Lockwasher, 5/16 Spring | x | × | · X | × |
| 6 | 48431 | Pipe, 4.75" Nipple | | | X | x |
| 7 | 48257 | Pipe Cap | | | X | x |
| 8 | 48059-01 | Fuel Hose Clamp | x | × | x | x |
| 9 | 04050-10 | Retaining Ring, 1/2 "E" | × | × | x | x |
| 10 | 45283 | Shaft Widmt RH Pump Control | x | x | x | x |
| 11 | 46324 | Lever Assembly, Pump Control - RH | x | x . | x | × |
| 12 | 48436 | Pump, Sunstrand BDP-10L100 | × | × | X | x |
| 13 | * | Bolt, Carriage, 3/8-16 x 1-1/4 | × | × | X | x |
| 14 | • | Lockwasher, 3/8 | x | x | x | x |
| | * | Hex Nut, 3/8-16 | × | × | x | x |
| 15 | | | | | | |
| 16 | 48484-01 | Elbow, 90 deg. Female 1/4 NPT to 1/4 JIC Male | × | X | X | X |
| 17 | 48117 | Plug, 3/8 NPT | x | x | x | x |
| 18 | 48491 | Tee, Galvanized 3/8 NPT | × | X | x | x |
| 19 | 48353-02 | Coupling, 7/16-20 SAE Flare Swivel to 1/4" Hose Push On | x | × | X | x |
| 20 | 48482-03 | Hose, 1/4" ID, 8" Long | x | , x | . X | × |
| 21 | 48350-03 | Elbow, 90 deg. 7/16-20 JIC to 7/16-20 "O" Ring | x . | : X | X | x |
| 22 | 48352-03 | Coupling, 3/8 Straight Male NPT to 1/2" Hose Push On | X | i, x | x | X |
| 23 | 48351-05 | Hose, 1/2" ID, 12" Long | x | × | x | x |
| 24 | 48486-01 | Elbow, 90 deg. Male 1/4 NPT to 1/4" Hose Push On | x | * x | x | x |
| 25 | 48352-02 | Coupling, 1/4 Straight Male NPT to 1/4" Hose Push On | x | × | x | x |
| 26 | * | Boit, Hex Hd., 5/16-18 x 2-1/2 | X | X | X | x |
| 27 | 48353-01 | Coupling, 3/4-16 SAE Flare Swivel to 1/2" Hose Push On | x | x | X | x |
| | 48489-02 | Elbow, 90 deg. Maie 3/4-16 JIC to 1/2" Maie NPT | x | x | x | x |
| 28 | | | | | | |
| 29 | 48471 | Oil Filter Assembly (Includes item 70) | X | X | X | X |
| 30 | 46323 | Lever Assembly, Pump Control - LH | × | × | . × X | × |
| 31 | 48015 | Battery | Service Control | | | × |
| 32 | • | Carriage Hd. Bolt, 1/4-20 x 6 | X | × | X | X |
| 33 | • | Flatwasher, 3/8 | · | × | X | , x , |
| 34 | 45302 | Battery Box | | | | X X |
| 35 | 42745 | Battery Clamp | | | | × |
| 36 | 04022-01 | Wing Nut, 1/4-20 Elastic Stop | x | x | x | x |
| 37 | 45125 | Sulky Mounting Bracket (Included with Riding Sulky) | | | | |
| 38 | * | Bolt, Hex Hd., 3/8-16 x 1-1/4 | x | × | x | × |
| 39 | * | Hex Nut, 5/16-18 | x | x | x | x |
| 40 | * | | x | x | x | x |
| | | Lockwasher, 5/16 Cover, Sulky Mount | | | | × |
| 41 | 48534 | Date Line Lie 2/9 16 v 2 2/4 | X X | X | X | |
| 42 | | Bolt, Hex Hd., 3/8-16 x 2-3/4 | | X | X | X |
| 43 | | Bolt, Hex Hd., 3/8-16 x 1 | X | X | Х . | X |
| 44 | 48468 | Wheel Assembly (Incl. 45, 46, 47, 48) | X | X | X | X |
| 45 | 48004-02 | Tire, 16 x 6.50, 2 ply | × | X | × | × |
| 46 | 48004-04 | Rim Assembly | x | × | X | x |
| 47 | 48468-05 | Wheel Hub (Includes item 48) | x | x | × | × |
| 48 | 48004-06 | Bolt and Nut | x | x | × | × |
| 49 | 04027-02 | Hex Castle Nut, 3/4-28 UNEF | × | x | × | × |
| 5 0 | 48437 | Motor, White RS | x | x | x | . x |
| | 48437 * | | | | × | × |
| 51 | | Cotter Pin, 3/32 x 1-1/4 | X | X | | |
| 52 | 04063-15 | Key, 3/16 x 3/16 x .75 | X | X T | X | X |
| | * | Bolt, Hex Hd., 3/8-16 x 2-1/4 | X | , x | x | X |
| 5 3 | | | | | | |
| 53 54 | 48470 | Pulley, Pump Shaft | X X | X. | X | × |

^{*} Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

ENGINE DECK CONT'D

See Page 3 For Illustration

| REF. | PART | | | | | + ** |
|----------|--------------|---|----------------------|------|------|------------|
| NO. | NO. | DESCRIPTION | 14KA | 14KH | 18KH | 20KHE |
| 56 | 42692 | Belt Guide, Cutter - Rear | x | x | × | x |
| 57 | 48051 | Spring, Pump Belt Idler | X | × | X | |
| 58 | * | Hex Nut, Elastic Stop Lock, 3/8-16 | × | × | | X X |
| 59 | * | Bolt, Hex Hd., 1/4-20 x 3/4 | | X | X | |
| 59 60 | 48141 | Taper Hub (for 48127) | X, X | X | X | x |
| 60 | 48378-03 | Taper Hub (for 48378) | * | | x | |
| | 48127 | Pulley, Cutter Drive | | | | X |
| 61 61 | 48378 | Pulley, Cutter Drive | x | x | × | |
| - | | | | | | X |
| 62 | 04050-02 | Retaining Ring, 3/4 Ext "E" | X | X | × | × |
| 63 | 48114-01 | Grease Fitting | × | X | X | X |
| 64 | 46340 | Idler Arm, Traction Belt (Includes bushings and grease fitting) | × | x | × | X |
| 65 | 45212 | Pivot, Idler Arm | x | X | X | X |
| 66 | + | Part Removed From Illustration | | | - | |
| 67 | 48422 | Pulley, Pump Drive | × | × | × | |
| 67 | 48423 | Pulley, Pump Drive | | | | × |
| 68 | 04063-03 | Key, 1/4 x 1/4 x 2-1/2 | x | X | × | × |
| 69 | 48473 | Pulley, Idler - Pump Drive | × | × | X | × |
| 70 | 48462-01 | Oil Filter | × | X | ·X | × |
| 71 | * | Hex Nut, #10-32 | x | X | × | × |
| 72 | * | Lockwasher, #10 Ext. Tooth | x | X | × | × |
| 73 | * | Washer (.219 x .500 x .049) | × | × | × | x |
| 74 | 48305 | Switch, Clutch Safety (black) | × | X | × | × |
| 75 | * | Phillips Hd. Machine Screw, 10-32 x 1/2 | x | × | × | × |
| 76 | 48485-02 | Elbow, 45 deg. Male 7/8-14 JIC to Male 7/8-14 "O" Ring | x | × | × | x |
| 77 | 48475 | Hose, Pump to Motor, LH - Forward | x | x | x | x |
| 77A | 48477 | Hose, Pump to Motor, RH - Forward | · x | × | x | × |
| 78 | 48476 | Hose, Pump to Motor, LH - Reverse | x | × | × | x |
| 78A | 48478 | Hose, Pump to Motor, RH - Reverse | x | x | × | x |
| 79 | 48526 | Lever, Dump Valve | x | × | x | × |
| 80 | * | Setscrew, #8-32 x 3/4 Socket Hd. | x | x | x | × |
| 81 | 48205 | Pad, Rubber | | | | × |
| 82 | + | Part Removed From Illustration | Minimum and American | | | |
| 83 | 04015-02 | Setscrew, #10-32 x 3/4 Socket Hd. | · x | x | × | x |
| 84 | * | Bolt, Hex Hd., 5/16-18 x 1-1/2 | x | X | x | . x |
| 85 | ** | Bolt, Hex Hd., 5/16-18 x 1 | × | x | x | X |
| 86 | 04063-14 | Key, 5.0 x 5.0 x 25mm | x | x | × | x |
| 87 | 04012-04 | Setscrew, 5/16-18 x 3/8 Hex Socket Hd. | x | × | × | x |
| NS | 43096 | Spacer, Oil Filter | x | x | x | x |

^{*} Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

REPLACEMENT DECALS

SGAG

48314
Decal - Scag's Logo
(Located On Cutter Deck Cover - Top Surface)

HEAVY DUTY COMMERCIAL

48072
Decal - Heavy Duty Commercial
(Located On Cutter Deck Cover - Front Wall)



SERIOUS BOOKLY INJURY MAY RESULT FROM FAILURE TO FOLLOW SAFE OPERATING PROCEDURES.

BEFORE LEAVING OPERATOR'S POSITION, YOU MUST

- DISENGAGE CUTTER BLADES
 SHIFT TRANSMISSION TO NEUTRAL
- WAIT FOR ALL MOVEMENT TO STOP

READ OPERATOR'S MARIJAL FOR ADDITIONAL SAFETY GUIDES

48222 Decal - Operator Warning (Located On Back Of Fuel Tank)



72 48327 61 48320 52 48319



48524
Decai - Speed Control
(Located On Shift Quadrant)

NOT SHOWN

48514
Decal - SCAG Zero Turn Redius
(Located on Oil Reservoir)

DANGER

ROTATING BLADES AND BELTS

- . REEP HANDS, FEET & CLOTHING CLEAR
- . KEEP ALL GUARDS IN PLACE
- SHUT OFF ENGINE & DISENGAGE BLADE CLUTCH BEFORE SERVICING
- . CLEAR AREA OF DEBRIS BEFORE MOWING
- . USE CAUTION IN DIRECTING DISCHARGE
- . KEEP BYSTANDERS, CHILDREN & PETS AWAY. READ INSTRUCTION MANUAL BEFORE OPERATING

48073

Decai - Danger, Rotating Blades (Located On Cutter Deck Cover -Near Discharge Chute)



AVOID ENGINE DAMAGE CLOSE FUEL VALVE WHEN ENGINE IS NOT RUNNING

48281
Decal - Operator Warning
Fuel Fill
(Located On Top of Fuel Tank)




48071
Decat - O.P.E.I. Safety
(Located On Gutter Deck Near
Discharge Chute)



48079 Decal - Key Switch (Located Near Keyswitch)

HANDLE ASSEMBLY

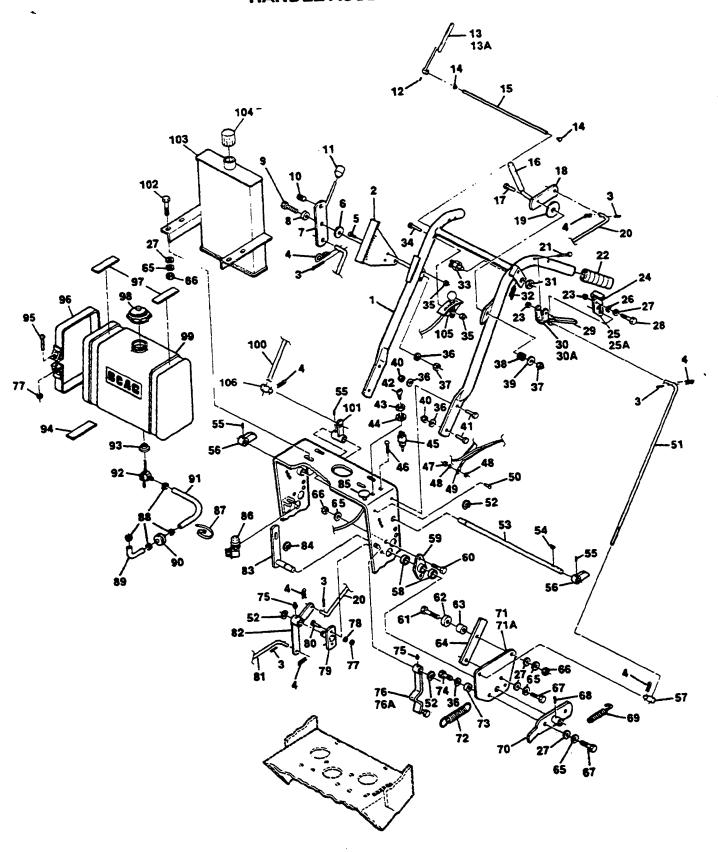

HANDLE ASSEMBLY

| NO | PART NO. | DESCRIPTION | 1 AK A | 14KH | 40VU | 20KHE |
|------------------|-------------|--|------------|------------|------------|--------|
| - | 110. | | 1484 | 141/17 | 101/11 | ZUNTE |
| 1 | 45280 | Handle Assy. | × | x | × | x |
| 2 | 42675 | Quadrant, Speed Control | x | × | x | × |
| 3 | • | Cotter Pin, 3/32 x 3/4 | × | × | x | x |
| 4 | 04062-02 | Hair Pin, Small | × | x | × | x |
| 5 | 04014-01 | Capscrew, 1/4-20 x .75 Flat Hd. Hex Socket | × | × | x | x |
| 6 | 04040-09 | Flat Washer, .656 ID x 1.312 OD x .095 | × | × | x | x |
| 7 | 45282 | Speed Adjustment Lever | × | x | x | x |
| 8 | 43086 | Bushing, Speed Adjustment Lever | × | × | x | x |
| 9 | * * | Bushing, Speed Adjustment Lever Bolt, Hex Hd., 3/8-16 X 1-1/4 | × | × | x | x |
| 10 | 48493-01 | Ball Plunger | × | x | x | x |
| 11 | 48092 | Knob, Speed Adjustment Lever | × | x | x | x |
| 12 | * | Set Screw, 1/4-28 x 1 Knurled Cup Point | x | x | x | x |
| 13 | 45142 | Safety Interlock, Hand Grip - LH | x | x | x | x |
| 13A | 45141 | Safety Interlock, Hand Grip - RH | x | × | X | x |
| 14 | 48312 | Rushing Control Bod | x | × | x | x |
| 15 | 44014 | Bushing, Control Rod Rod, Control Pivot | x | x | x | x |
| 16 | 48326 | Grip, Cutter Deck Engage | x · | x | x | x |
| 17 | 40320 * | Bolt, Hex Hd., 3/8-16 x 1-3/4 | X. | X | X | X |
| 1 <i>(</i> 18 | 46090 | Blade Clutch Lever Assy. (Includes grip) | X | X | X | X X |
| - | 04041-10 | | | | | |
| 19 | | Flat Washer, 3/8 x 2 x 16 ga. Rod. Belt Clutch - Cutter | X | X | X | X |
| 20 | 46076 * | | X | X | × | X |
| 21 | | Carriage Bolt, 5/16-18 x 2-1/2, Rd. Hd. Sq. Nk. | × | X | X | X |
| 22 | 48159 | Grip, Handle | | X | · X | X |
| 23 | * | Hex Nut, 5/16-18, Elastic Stop | X | , X | × | x |
| 24 | 48324-01 | Grip, Neutral Latch - RH | X | , x | x | × |
| 24 | 48324-02 | Grip, Neutral Latch - LH | X | X | x | × |
| 25 | 46083-01 | Neutral Latch - RH (Includes grip) | × | x | X | X |
| 25A | 46083-02 | Neutral Latch - LH (Includes grip) | x | x | x | X |
| 26 | 04032-01 | Curved Spring Washer | × | X | × | X |
| 27 | • | Flat Washer, 5/16 | × | × | X | X |
| 28 | • | Bolt, Hex Hd., 5/16-18 x 2 | × | × | X | X |
| 29 | 48492 | Grip, Steering Control | × | × | x | x |
| 30 | 46333 | Steering Control Lever - RH (Includes grip) | × | × | . X | x |
| 30A | 46334 | Steering Control Lever - LH (Includes grip) | , x | · × | X | x |
| 31 | 04026-01 | Hex Nut, 9/16-18 Spring Steel | × | . X | x | x |
| 32 | 48313 | Spring, Grip Return | x | ^ x | . x | x |
| 33 | 48021 | Switch, Interlock (gold colored) | · x | × | · x | x |
| 34 | * | Bolt, Hex Hd., 1/4-20 x 2 | x | x | x | x |
| 35 | * | Hex Nut, 1/4-20 Elastic Stop | × | x | x | x |
| 36 | * | Flat Washer, 3/8 | X | X | x | x |
| 37 | * | Hex Nut, 3/8-16 Elestic Stop | X | X | X | x |
| 38 | 48050 | Spring, Compression | x | n. x | × | x |
| 39 | 46030 | Flat Washer, 25/64 x 15/16 x 12 ga. | x | ·. | x | x |
| 39 40 | | Hex Nut, 3/8-16 Elastic Stop | x | x | x | x |
| | • | | X | × | × | x |
| 41 | | Bolt, Hex Hd., 3/8-16 x 1 | X | × | × | × |
| 42 | 48017-02 | Key, Ignition | | | | |
| 43 | 48017-04 | Hex Nut, 5/8-32 | X | X | X | X |
| 44 | 48017-03 | Lockwasher, 5/8 Internal Tooth | X | X | X | × |
| 45 | 48171 | Switch, Ignition | × | x | x | |
| 45 | 48017 | Switch, Ignition | | | | X |
| 46 | • | Bott, Hex Hd., 1/4-20 x 1/2 | * | X | x | X |
| 47 | * | Hex Nut, #10-32 | X | X | x | × |
| 48 | • | Lockwasher, #10 External Tooth | x | × | • X | × |
| 49 | 48495 | Wire Harness | × | · x | × | |
| 49 | 48496 | Wire Harness | * | | | × |
| NS | 48527 | Wire Harness Adapter | × | | | |
| 50 | * | Machine Screw, #10-32 x 1/2 Phillips | x | x | x | × |
| 51 | 46294 | Control Rod, Steering | × | x | x | x |
| 52 | 04050-01 | Retaining Ring, 5/8 Ext "E" | x | X. | . X | x |
| ~~ | | Jackshaft, Speed Control | x | x | x | x |

^{*} Common hardware which should be purchased locally. All bolts grade 5 plated, all other fasteners zinc plate.


HANDLE ASSEMBLY CONT'D

See Page 7 For Illustration

| REF. | PART | | | | | |
|------|----------|--|------------------|------|------------|------|
| NO. | NO. | DESCRIPTION | 14KA | 14KH | 18KH | 20KH |
| | | W 418 41814 + 1 W 118 | | | | |
| 54 | 04063-13 | Key, 1/8 x 1/2 Woodruff #3 | × | × | × | × |
| 55 | * | Setscrew, Hex Socket Knurled Cup Pt., 1/4-28 x 1/4 | x | × | × | X |
| 56 | 46335 | Carn, Speed Control (Includes setscrew) | × | × | X | X |
| 57 | 43157 | Swivel Joint, Steering Rod | × | × | X | x |
| 58 | 48100-04 | Bushing | × | × | x | × |
| 59 | 46336 | Pivot, Pump Control Shaft (Includes bushings and grease fitting) | × | × | x | x |
| 60 | • | Bolt, Hex Hd., 5/16-18 x 1 | x . | × | x | x |
| 61 | 04001-69 | Bolt, Hex Hd., 5/16-18 x 1-3/4 Full Thread | x | × | x | x |
| 62 | 48409 | Bearing, Speed Control | x | × | x | x |
| 63 | 43161 | Spacer, Speed Control Bearing | X | X | X | x |
| 64 | 42730 | Bar, Speed Control Adjustment | X | X | x | × |
| 65 | * | Lockwasher, 5/16 | x | × | x | x |
| 66 | * | Hex Nut, 5/16-18 | x | x | × | |
| | * | | | | | × |
| 67 | | Bolt, Hex Hd., 5/16-18 x 3/4 | X | X | × | X |
| 68 | 04065-05 | Drive Pin, 5/32 x 7/8 Type U | x | x | × | x |
| 69 | 48051 | Spring, Neutral Return | X | × | X | × |
| 70 | 45292 | Handle, Neutral Adjustment | X | x | × | X |
| 71 | 45271 | Belicrank, LH Control | × | × | x | X |
| 71A | 45272 | Belicrank, RH Control | x | × | x | x |
| 72 | 48494 | Spring, Speed Control | × | × | X | × |
| 73 | 48224 | Bearing, Neutral Return | × | × | X | x |
| 74 | * | Bolt, Hex Hd., 3/8-16 x 3/4 | × | × | x | × |
| 75 | 48114-01 | Grease Fitting, Straight 1/4-28 | . X | × | x | × |
| 76 | 46337 | Neutral Carn, RH (Includes grease fitting) | X | X | X | X |
| 76A | 46338 | Neutral Carn, LH (Includes grease fitting) | : X | X | × | × |
| | ****** | Hex Nut, 1/4-20 | × | | | |
| 77 | • | | | X | X | X |
| 78 | | Lockwasher, 1/4 | X | X | X | X |
| 79 | 45094 | Bellcrank Pivot Weldment | × | × | × | × |
| 80 | * | Bolt, Hex Hd., 1/4-20 x 1 | X | X | x | × |
| 81 | 44003 | Rod, Blade Clutch - Lower | X | × | x | × |
| 82 | 46339 | Bellcrank, Cutter Engage (Includes grease fitting) | x | × | x | x |
| 83 | 45295 | Shaft, LH Pump Control | × | × | x | X |
| 84 | • | Retaining Ring, 1/2" Ext "E" | X . | × | . x | x |
| 85 | 48091 | Choke Control | | | x | × |
| 86 | 48026 | Switch, Neutral | X | × | x | x |
| 87 | 48028-01 | Cable Tie | X | × | x | x |
| 88 | 48059-01 | Clamp, Fuel Hose | X | X | ' X | X |
| 89 | 48179-01 | Fuel Hose, Short 7/32 iD x 3-1/2 (KA only) | X | - | ~ | - |
| 90 | 48057-02 | Fuel Filter | × | | | |
| | | • | | | | |
| 91 | 48058-05 | Fuel Hose, 1/4 ID x 20 | , X | | | |
| 91 | 48058-10 | Fuel Hose, 1/4" x 10" | | X | | |
| 91 | 48058-02 | Fuel Hose, 1/4 ID x 14-1/8 (KH only) | | | X | X |
| 92 | 48308 | Valve, Fuel Shut-off | · X | × | × | x |
| 93 | 48309 | Bushing | × | × | x | × |
| 94 | 48205 | Pad, Rubber - Fuel Tank - Lower | × | × | x | X |
| 95 | * | Machine Screw, 1/4-20 x 2 Round Hd. Slotted | × | × | × | X |
| 96 | 42369 | Strap, Fuel Tank | × | × | x | x |
| 97 | 48292 | Pad, Rubber - Fuel Tank - Upper | x | x | × | x |
| 98 | 48311 | Fuel Tank Cap | x | x | x | x |
| | 46174 | Fuel Tank Assembly (Includes items 92, 93, 98 and decals) | · X | X | × | × |
| 99 | | | : | | | |
| 100 | 46295 | Rod, Traction Control Relicrank, Speed Control | X | X | X | X |
| 101 | 45279 | Bellotain, Opera Control | X | × | × | X |
| 102 | * | Carriage Bolt, 5/16-18 x 1 Rd. Hd. Sq. Nk. | X | X | X | X |
| 103 | 45276 | Oil Reservoir | * * x * * | × | X | X |
| 104 | 48535 | Cap, Oil Reservoir | X | × | X | X |
| 105 | 48394 | Throttle Control | X | X | | |
| 105 | 48266 | Throttle Control | | | x | x |
| 106 | 43032 | Swivel Joint, Speed Control Rod | × | × | x | x |

^{*} Common hardware which should be purchased locally. All bolts grade 5 plated, all other fasteners zinc plate.

ELECTRIC START ELECTRICAL SYSTEM

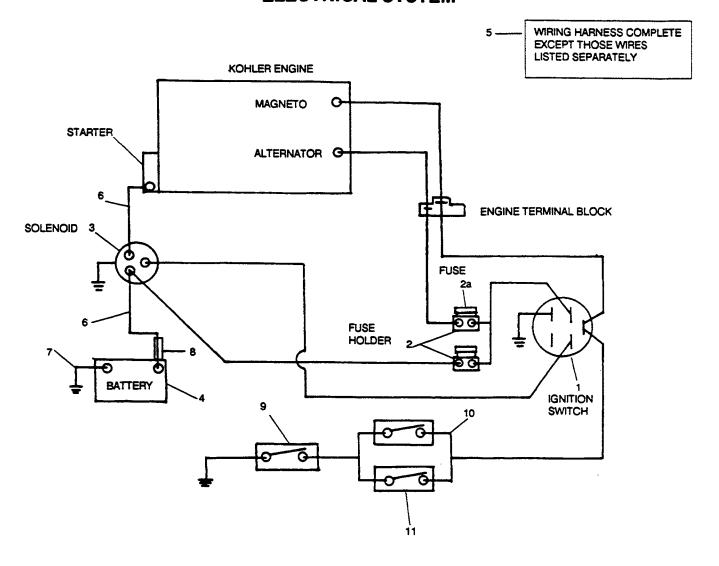

| REF. NO. | PART NO. | DESCRIPTION | SWZ 20KHE |
|-------------|-------------------|--|----------------------|
| 1 | 48017 | Key Switch | x |
| 2 | 48297 | Fuse Holder | x |
| 28 | 48298 | Fuse 20 Amps | x |
| 3 | 48016 | Solenoid | x |
| 4 | 48015 | Battery may be purchased locally (U9-LM) | x |
| 1 | 48496 48029-03 | Wiring Harness Complete Battery Cable - 13-3/4" Red | x x |
| | 48029-01 | Battery Cable - 13-3/4" Black | X |
| 8 | 48126 48021 | Rubber Boot Switch, Handle Interlock N.C. | X X |
| 10 | 48305 | Switch, Cutter Drive Interlock N.C. | x |
| 11 | 48026 | Switch, Neutral Interlock N.C. | x |

WIRING DIAGRAM FOR MANUAL START

